

Title:	Voltage Selector Standard			ID:
				0056
Date in:	Response:	Model:	Author:	
2007-11-22	2007-11-22	-	CMa	

# ***Power Connectors***

***This Unit***

Serial-Nr.


\_\_\_\_\_

***is pre configured for***


\_\_\_\_\_ **V**

## Connectors

### Back panel



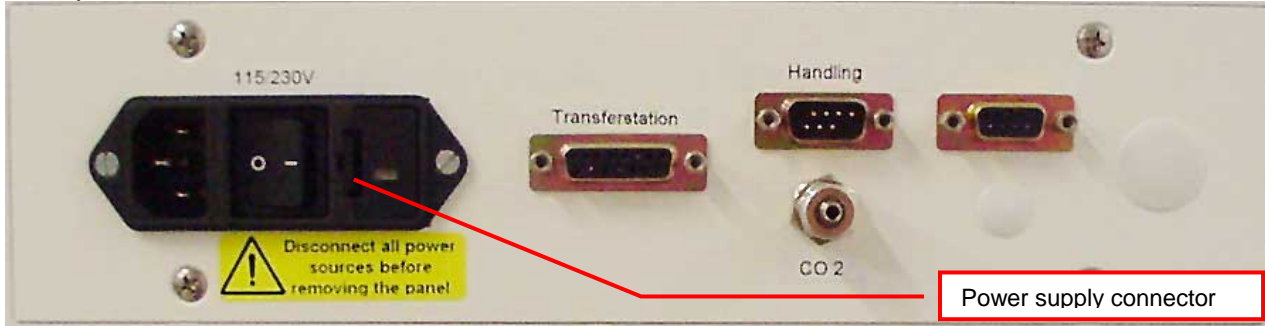


### Connectors Details

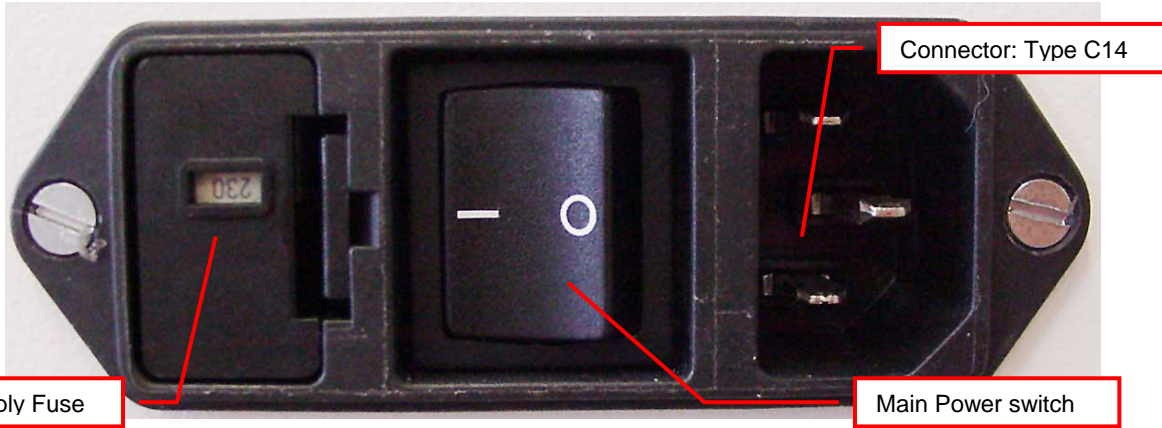


### Switching Supply Voltage



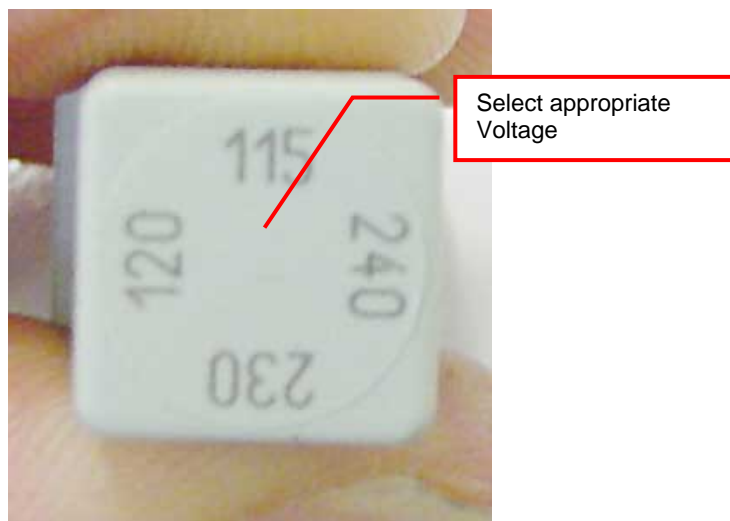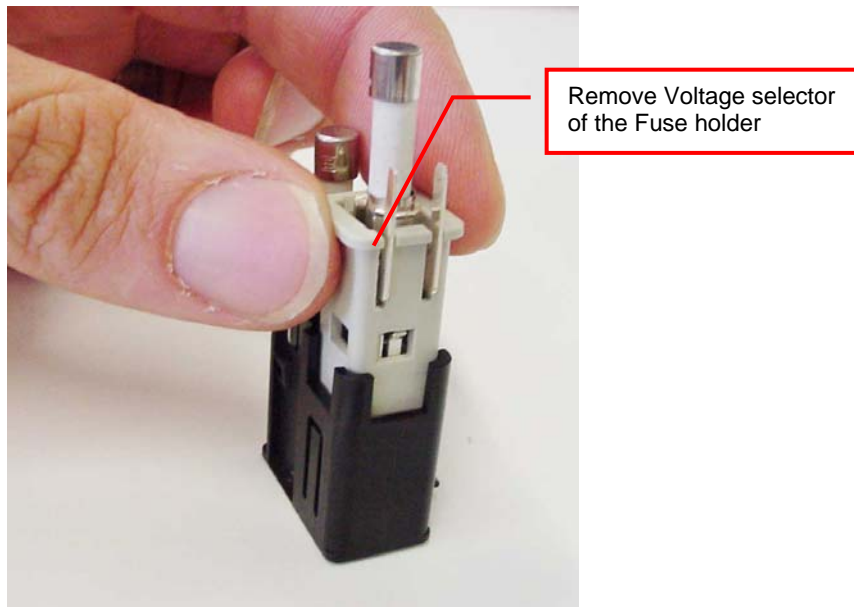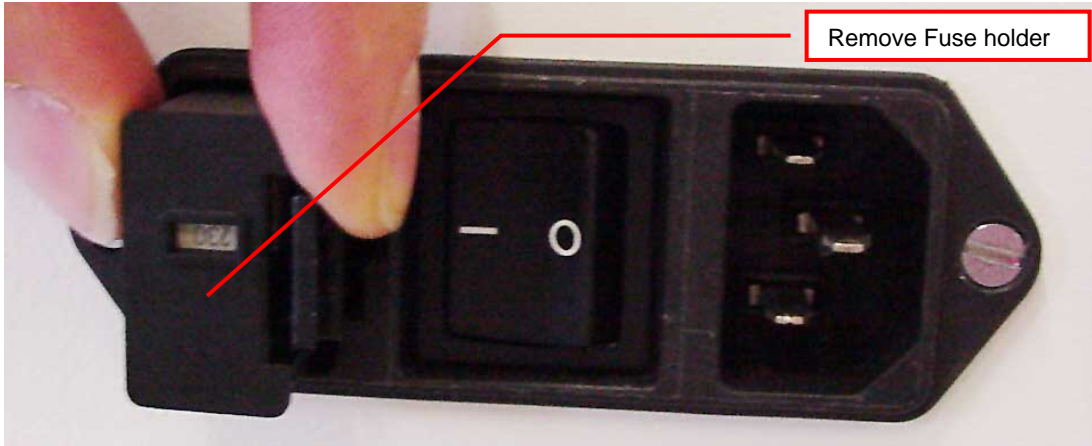



Put the Voltage selector back into the Fuse holder: The supply Voltage should be visible in the little window

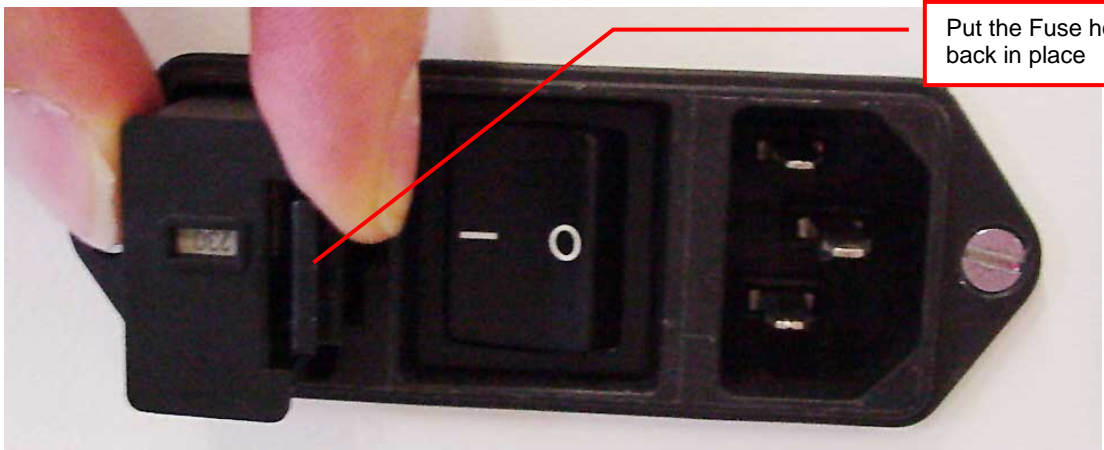

Put the Fuse holder back in place